


Micro Touch 16x2-3 Custom Programmable Controller

- Red Wire = 12 volt (+ Red) on Battery
- Black Wire = Ground (- Black) on Battery
- Yellow Wire = Wrap around spark plug Wire 3 times then tape.
*** 99-02 SeaDoo's with twin coils - wrap around each plug wire 3 times.***
- Gray / Red-Blk Wires = To Solenoid (Polarity does NOT matter)

Speed Selections

RPM Settings	Water ON RED Jumpers			
	1	2	3	4
1,200	■	■	■	■
1,250	●●	■	■	■
1,300	■	●●	■	■
1,350	●●	●●	■	■
1,400	■	■	●●	■
1,450	●●	■	●●	■
1,500	■	●●	●●	■
1,550	●●	●●	●●	■
1,600	■	■	■	●●
1,650	●●	■	■	●●
1,700	■	●●	■	●●
1,750	●●	●●	■	●●
1,800	■	■	●●	●●
1,850	●●	■	●●	●●
1,900	■	●●	●●	●●
2,000	●●	●●	●●	●●

RPM Settings	Water OFF BLUE Jumpers			
	5	6	7	8
4,600	■	■	■	■
4,750	●●	■	■	■
4,900	■	●●	■	■
5,050	●●	●●	■	■
5,200	■	■	●●	■
5,350	●●	■	●●	■
5,500	■	●●	●●	■
5,650	●●	●●	●●	■
5,800	■	■	■	●●
5,950	●●	■	■	●●
6,100	■	●●	■	●●
6,250	●●	●●	■	●●
6,400	■	■	●●	●●
6,550	●●	■	●●	●●
6,700	■	●●	●●	●●
6,850	●●	●●	●●	●●

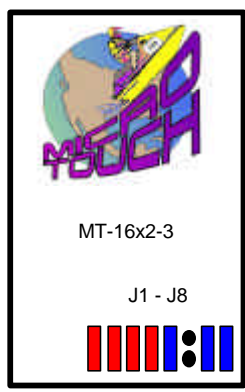

Legend

■ = Jumper - ON

●● = Jumper - OFF

Water shuts OFF 400 RPM's Later than OFF Setting

NOTE: Keep the controller mounted a few inches away from ignition coil(s) or plug wires. Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!